





INSTALLATION GUIDE

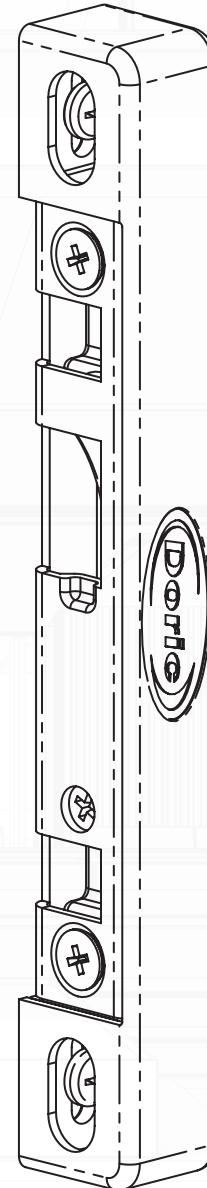

DS5010

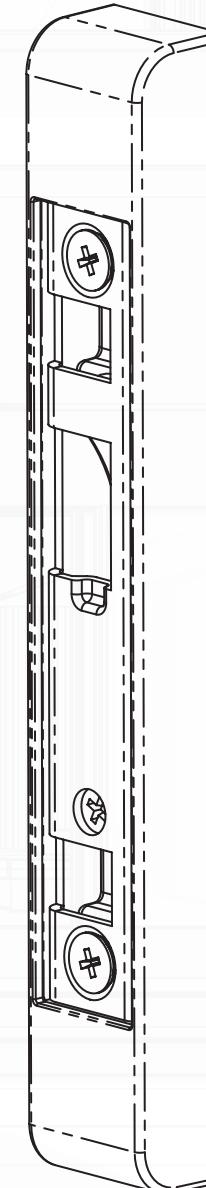

DS5011

DS5010
DS5011
v1.1 - 11/08/2021


**SLIDING DOOR
KEEPER**

Head office:
38 Redfern St
Wetherill Park NSW 2164
Australia


Ph: 1300 132 389
Fax: 1300 652 292
sales@doric.com.au
www.doric.com.au




DS5010

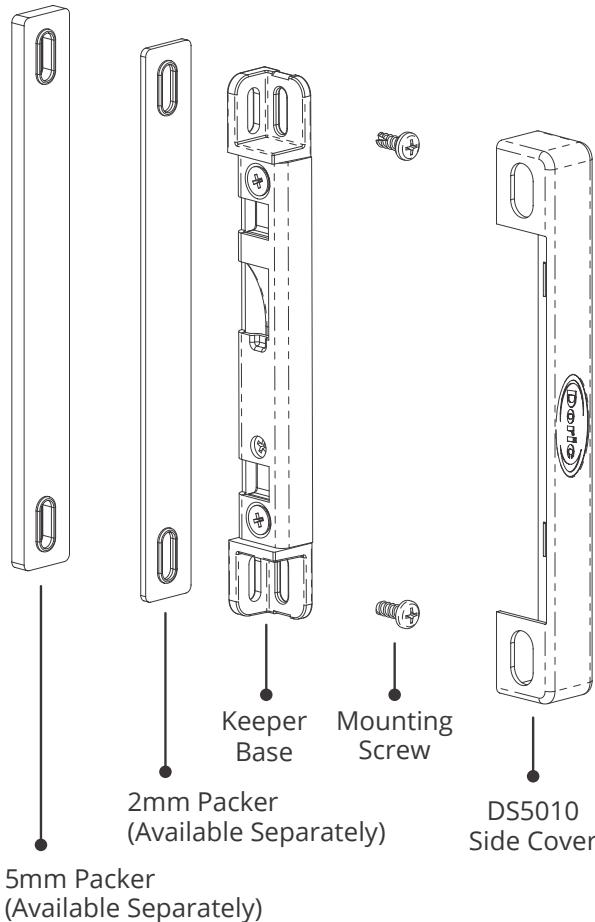

DS5011

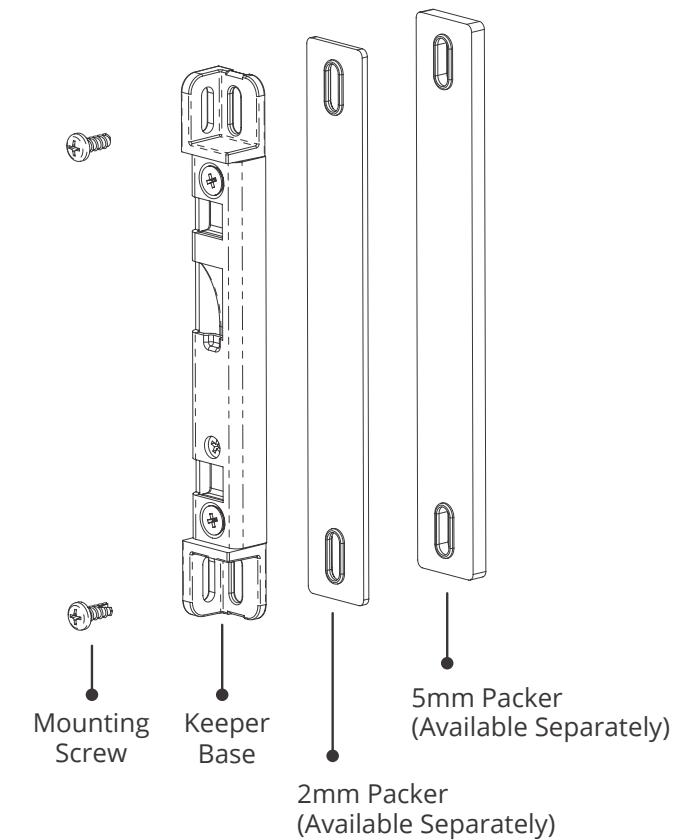


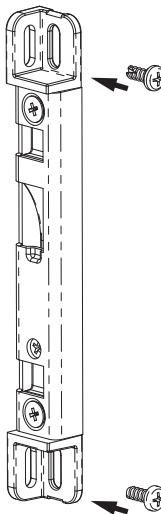

1. Placing Keeper

Install the Keeper base, secured loosely in the CROSS FIXED holes using the mounting screws provided.

Do not tighten the screws yet.

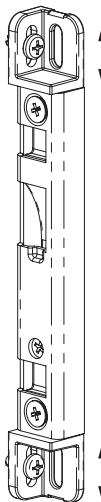


2. Vertical Adjustment

Adjust the Keeper base vertically until the correct position is found in relation to the door lock.


The keeper base offers adjustment up to 9mm

Now tighten the mounting screws.

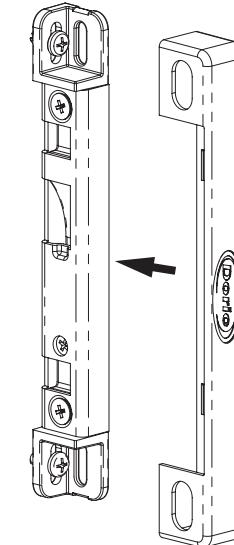


3. Fitting Cover

Install the side cover, *Unless adding INLINE fixing proceed to step 5.*


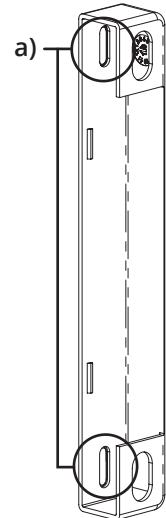


4. Additional Fixing (Optional)

If additional INLINE fixing is to also be used:

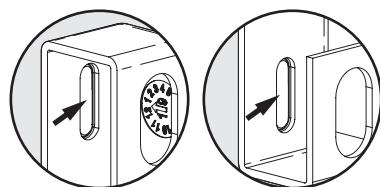

- Remove the two pop out tabs on the rear of the cover.
- Fit the side cover (Step 3).
- Add additional INLINE fixing screws through the cover cutouts.

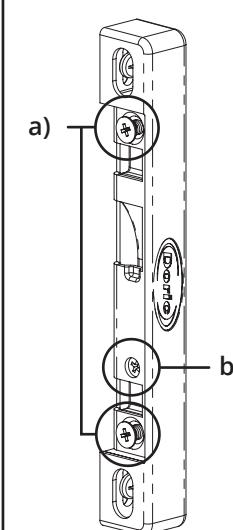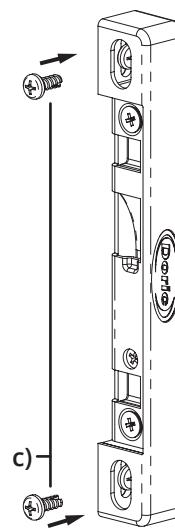


5. Horizontal Adjustments


a) To increase horizontal adjustments, loosen the top and bottom adjustment screws to the desired amount (up to 5mm)

b) Loosen the centre adjustment screw until the faceplate comes into contact with the top and bottom adjustment screws

c) To decrease the horizontal adjustment, tighten the centre adjustment screw, and then tighten the top and bottom adjustment screws until firm

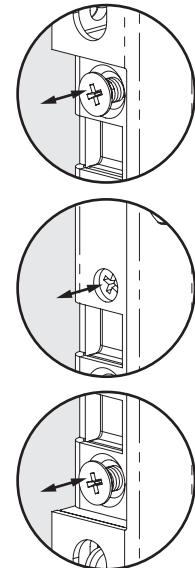


DS5010 | SLIDING DOOR KEEPER

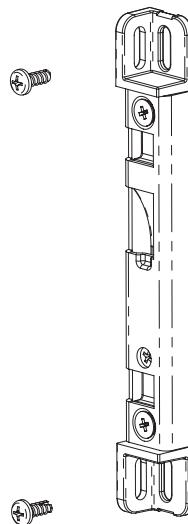

1. Placing Keeper

Install the Keeper base, secured loosely in the INLINE fixing holes using the mounting screws provided.


Do not tighten the screws yet.

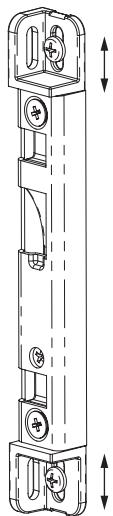

2. Vertical Adjustment


Adjust the Keeper base vertically until the correct position is found in relation to the door lock.

The Keeper base offers adjustment up to 9mm
Now tighten the mounting screws.

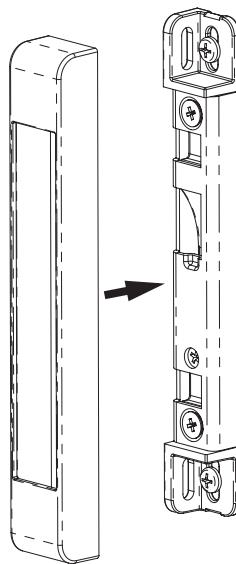

3. Fitting Cover

Install the front cover.

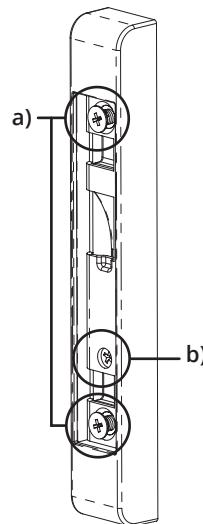

4. Horizontal Adjustments

a) To increase horizontal adjustments, loosen the top and bottom adjustment screws to the desired amount (up to 5mm)

b) Loosen the centre adjustment screw until the faceplate comes into contact with the top and bottom adjustment screws

c) To decrease the horizontal adjustment, tighten the centre adjustment screw, and then tighten the top and bottom adjustment screws until firm

